



aircharge®

How To: Replacing a Retractor

Components



Aluminium Orb Holder



Retractor




Security Bit



Orb


Removing the Aluminium Block Backing Plate

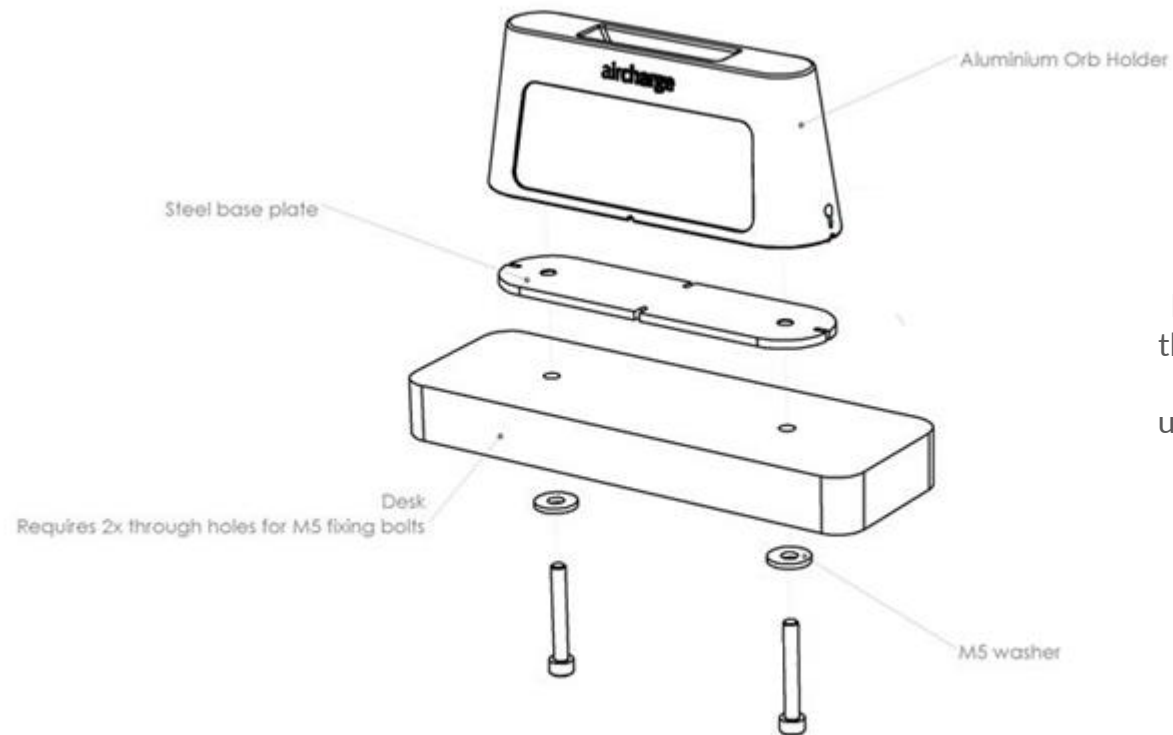

If your Orb Holder is Fixed to the counter, then you will need to undo the 2 x M5 Bolt, underneath the Counter, using an Allen Key.

Removing the Retractor and Orb

Step 1

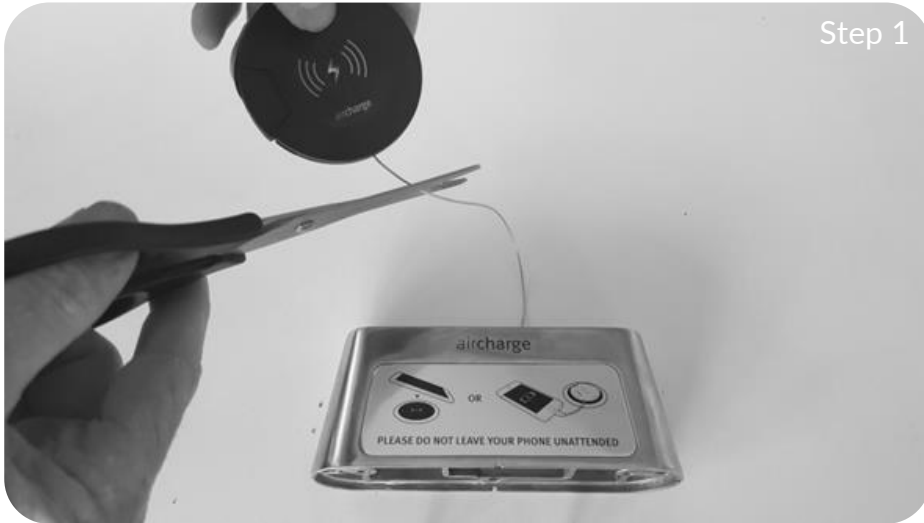


Using a pair of scissors, cut the old retractor wire and throw away the old Orb.

Step 2



Push out the old Retractor and throw away.

Installing the new retractor

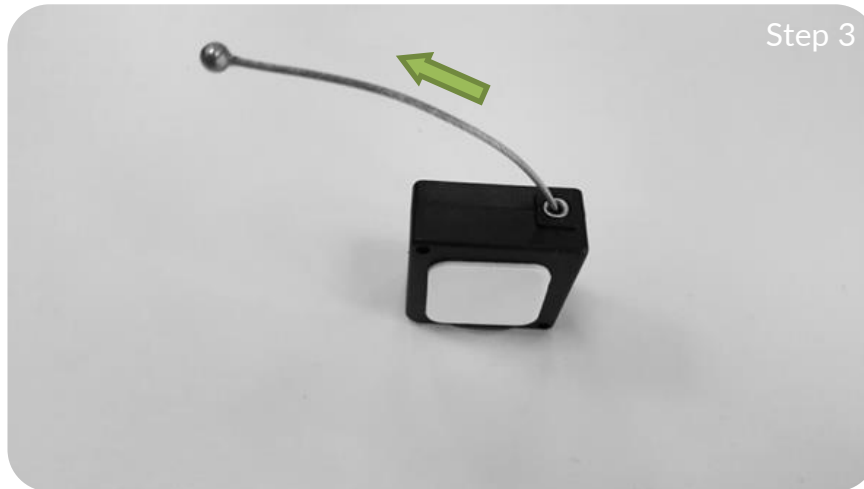


Pull out 5cm of the wire from the new retractor.



Feed the retractor wire through the hole in the bottom of the Aluminium holder and fit the retractor in place.


Step 5

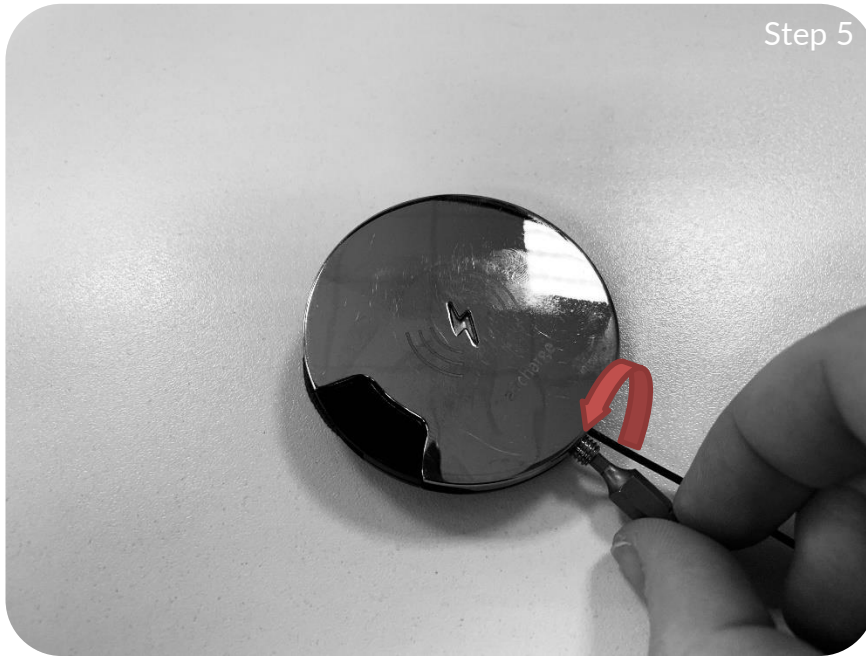

Removing the Orb

Using the 'Security Bit', remove the Grub Screw in the Orb.


Step 6

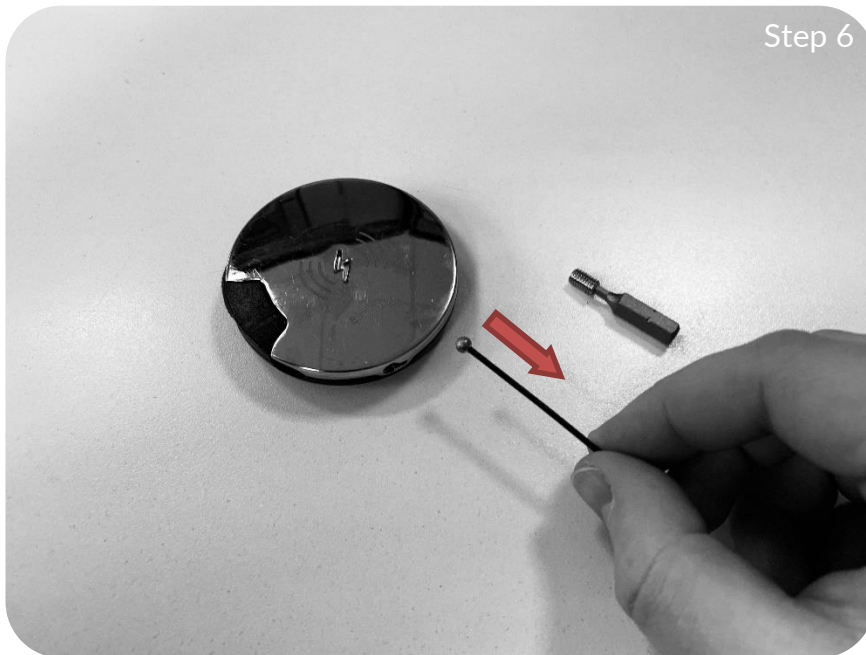


Remove the old retractable tether's ball joint from the Orb's Grub Screw slot.

Attaching the Orb

Insert the new retractor's ball joint into the Grub Screw slot of the Orb.

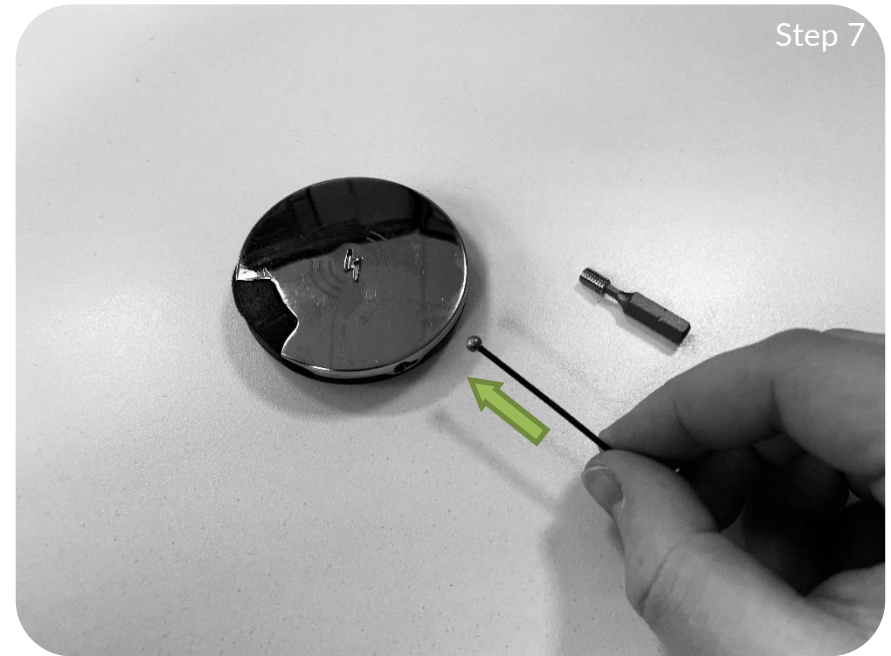

Tighten the Grub Screw to secure the retractable tether's ball joint inside the Orb.

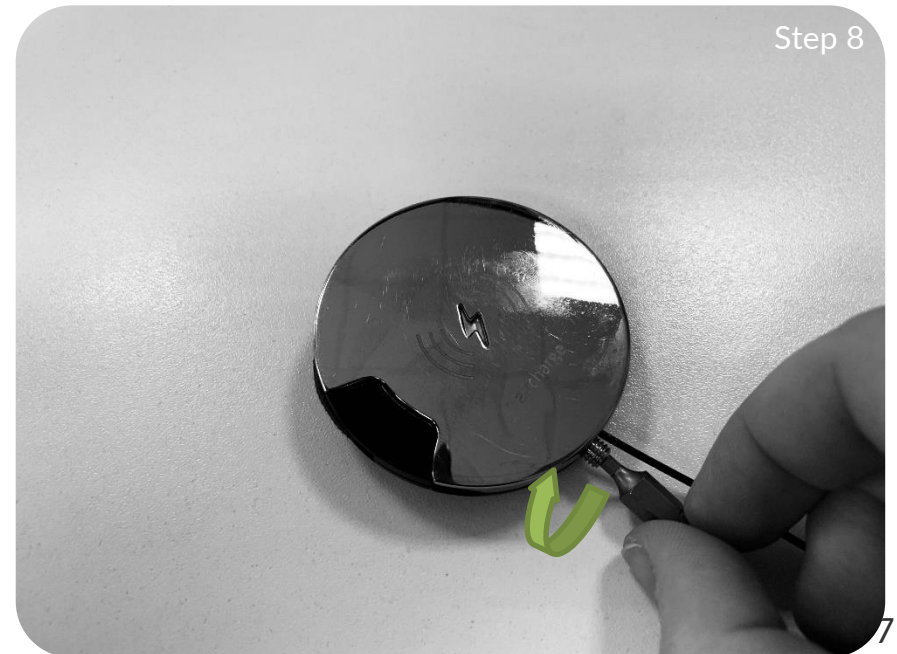



Once the new retractor is installed, re-fix the Aluminium Orb Holder to the surface.



Thomas Ketterer

Aircharge Partner

Deutschland – Österreich – Schweiz

M DE: 0171 81 68 114

T DE: 09154 911 80 25

T AT: 0720 512 638

T CH: 0325 113 864

W: www.air-charge.de

E: thomas@air-charge.de

Skype: TK-Work