




# aircharge ((( ⚡ ))) Battery Pack Installation Guide

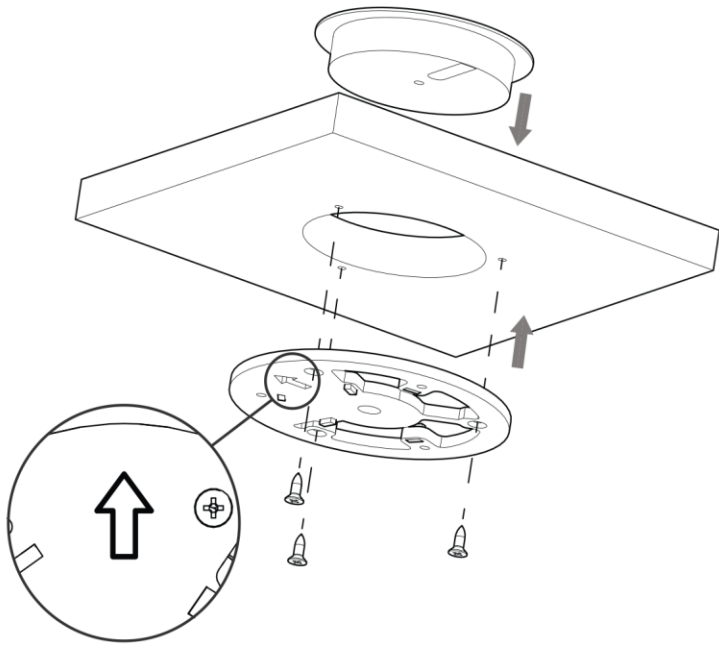


1. Cut a hole through the worktop substrate at the desired location using an 80mm hole saw.
2. Insert the surface charge unit into the hole from the top of the substrate.
3. Attach the mounting plate to the underside of the worktop substrate using the self-tapping, countersunk screws provided. Pilot holes are recommended for most installations.

**NOTE:** It is important to ensure the arrow of the mounting plate is facing forward - this indicates where the front of the battery and indicator LEDs will face once installed.

4. Connect the male USB cable from the surface charge unit to the female cable from the battery holder.
5. Screw the battery holder to the mounting plate using the machine screws and plastic spacers provided.
6. Screw the central, shorter machine screw through the battery holder, mounting plate and into the base of the surface charger.

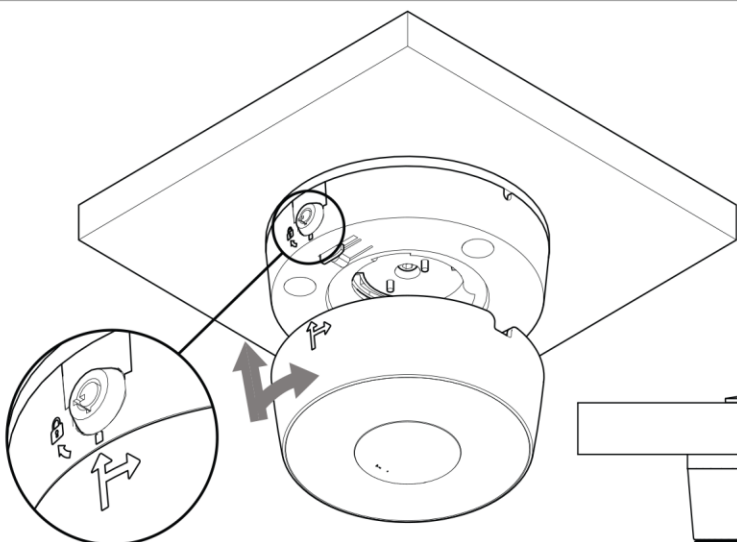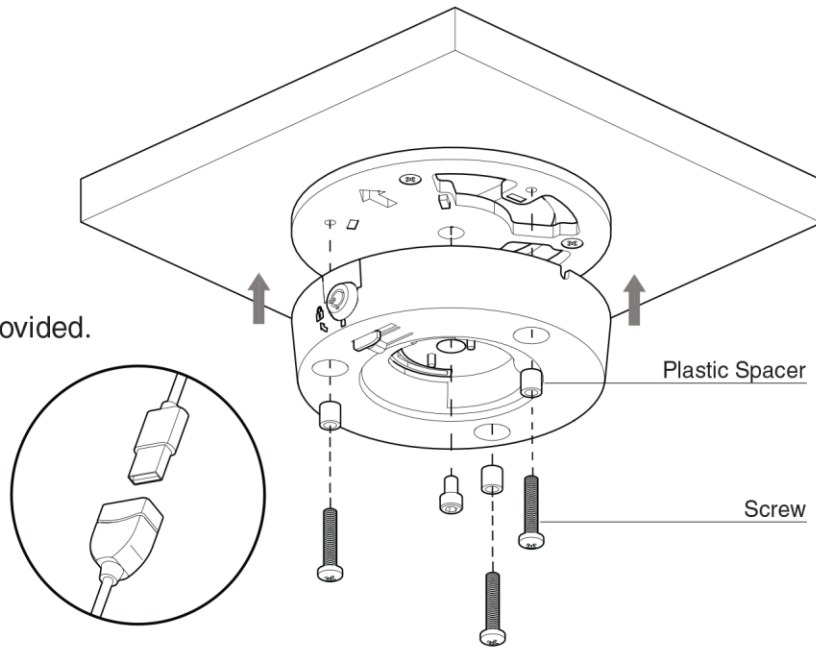

7. Push the battery puck up into the battery holder, aligning the marked arrow on the battery puck with the corresponding mark on the battery holder. Rotate the battery clockwise as far as possible.
8. Lock the battery into place to prevent it from rotating free. Place one of the keys provided into the cam lock and rotate 90 degrees.

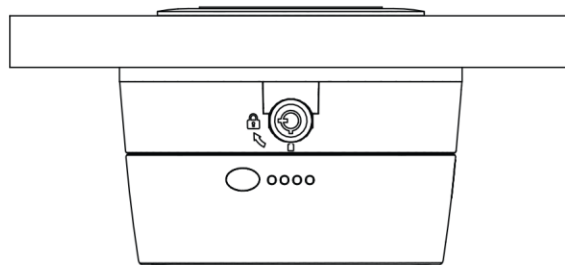



**Thomas Ketterer**

Aircharge Partner

Deutschland – Österreich - Schweiz

M DE: 0171 81 68 114

T DE: 09154 911 80 25

T AT: 0720 512 638

T CH: 0325 113 864

W: [www.air-charge.de](http://www.air-charge.de)

E: [thomas@air-charge.de](mailto:thomas@air-charge.de)

Skype: TK-Work