



aircharge®

How To:



Installing a Sub-Surface
Charger

Our sub-surface charger can be installed within any non-metallic material to provide a discreet and convenient wireless charging solution. Install the sub-surface charger up to 4mm below the surface of a worktop, desk, coffee table or display unit .



From the underside of the surface proceed to drill a 80mm diameter hole at a 90 degree angle, to the required depth.

Ensure that no more than 4mm of material is left between the top of the surface charger and the top of the surface.

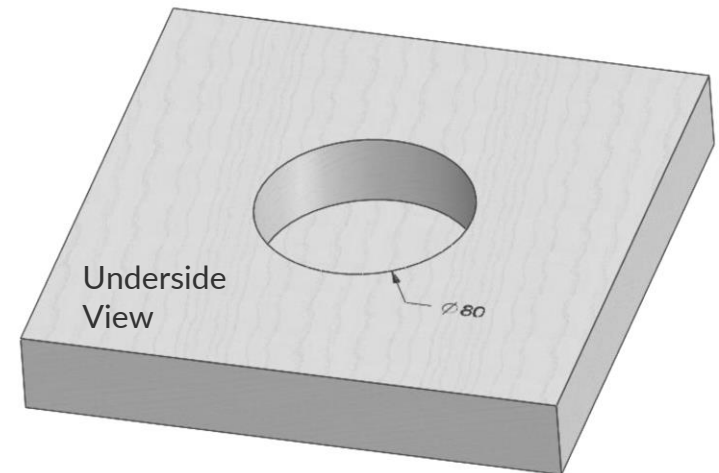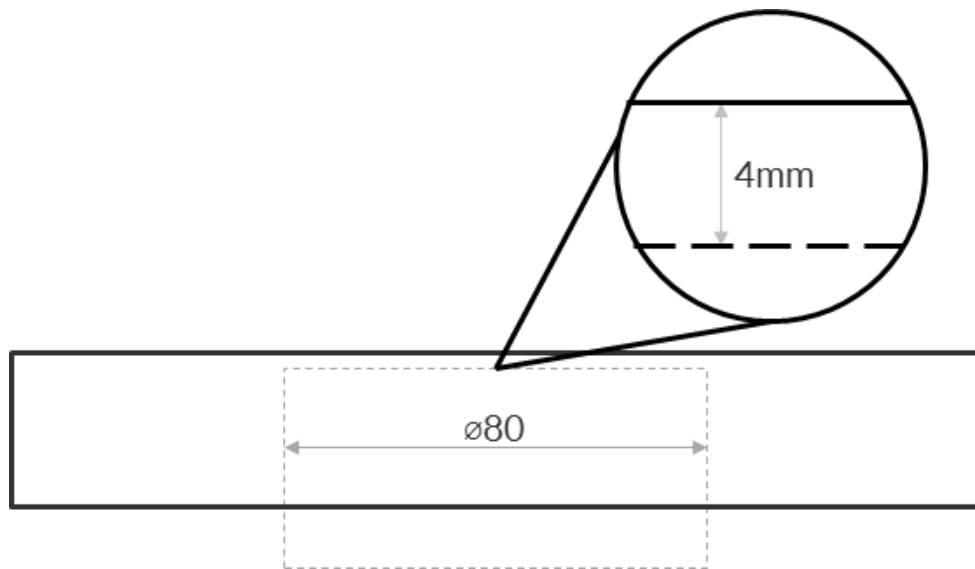



Once the surface charger is placed into the 80mm grommet hole, secure the device in place using the provided fixing kit.

Ensure that the USB cable is run through the bottom of the plate and that suitable containment is used to protect the cable from tampering.



When a Sub-surface Aircharge unit is installed, the surface above the charger **must** show our trademark brand and power logo, in a non-removable form, as part of the Wireless Charging guidelines set out between Apple & Aircharge.

The outer ring should measure 95mm diameter to assist in centering the device over the charger.

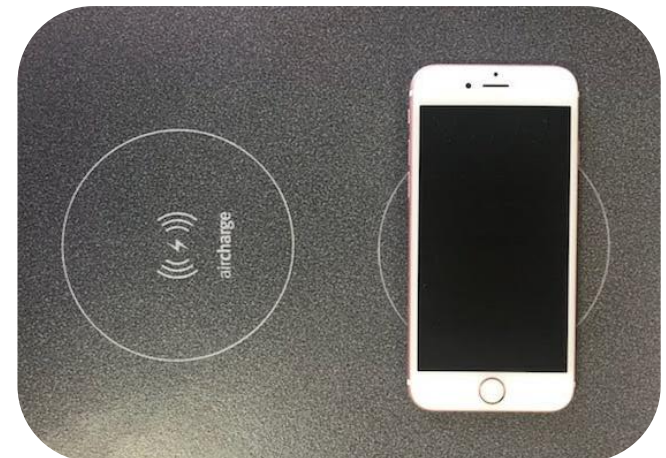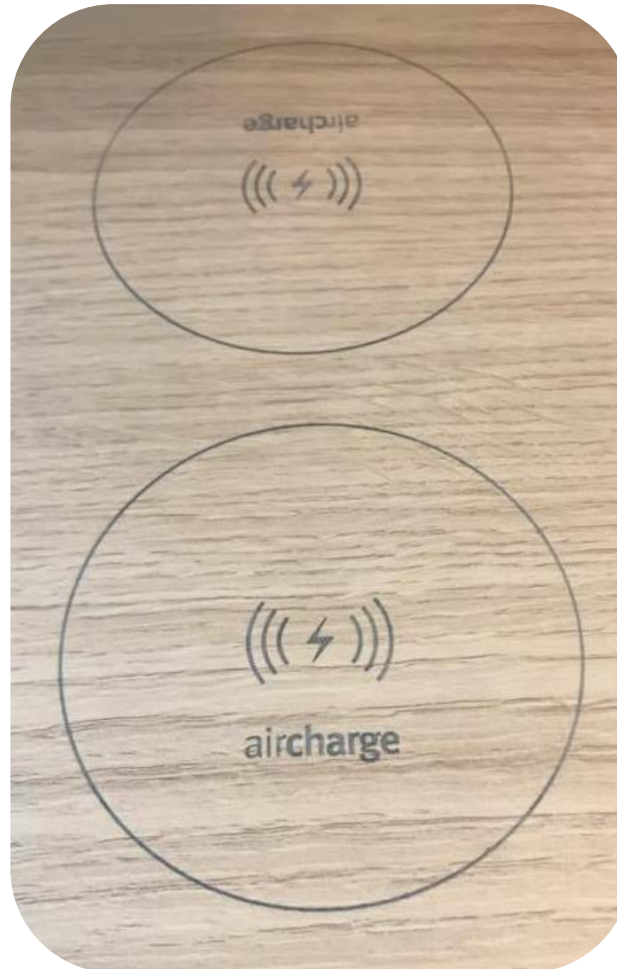

In the event that a physical impression of the logo into the workshop is not possible, use a gorilla glass or hard wearing material with strong adhesive backing to stick to the surface.





Thomas Ketterer

Aircharge Partner

Deutschland – Österreich - Schweiz

M DE: 0171 81 68 114

T DE: 09154 911 80 25

T AT: 0720 512 638

T CH: 0325 113 864

W: www.air-charge.de

E: thomas@air-charge.de

Skype: TK-Work