



aircharge®

How To:

Removing a Retractor and
Installing a Fixed Tether

Components

Orb

PoD Grub Screw

Security Bit

Fixed Tether Wire




Step 1

Pull up the Orb to show the grub screw that connects the Orb to the Retractor.



Step 2


Step 3

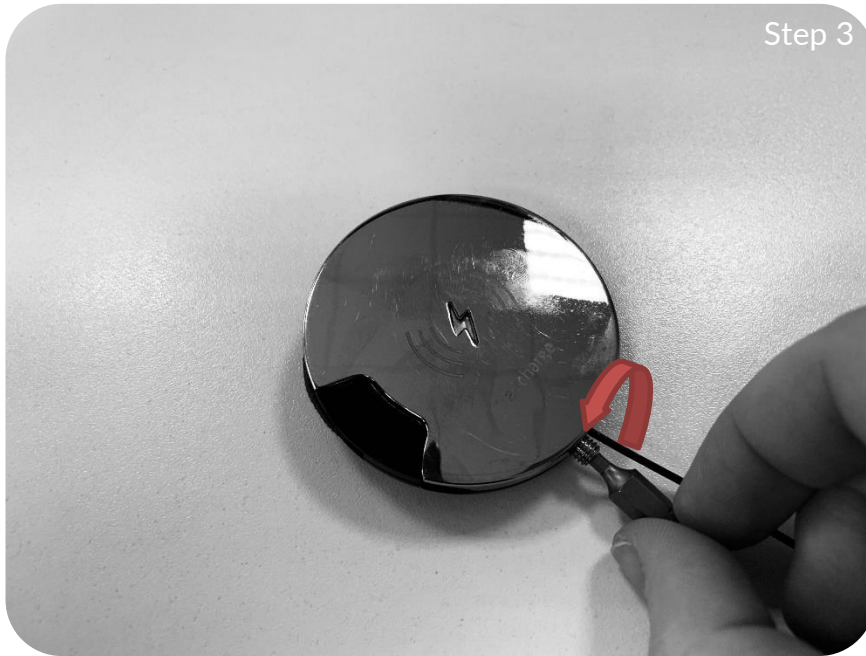

Removing an Orb

Using the 'Security Bit', remove the Grub Screw in the Orb.

Step 4

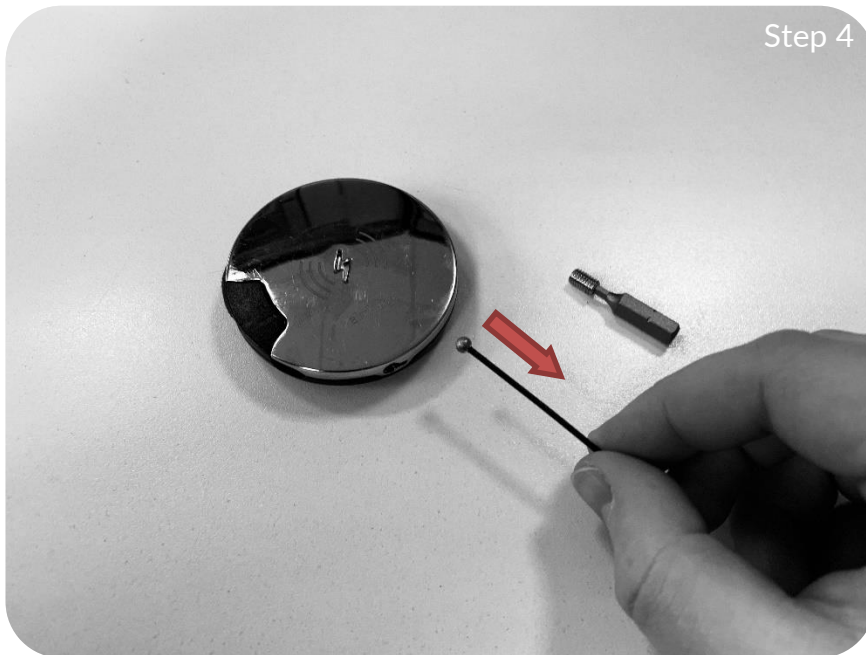


Remove the retractable tether's ball joint from the Orb's Grub Screw slot.


Let the retractor pull the tether inside the PoD.

Attaching a New Orb

Insert the Fixed Tether's ball joint into the Grub Screw slot of the new Orb.

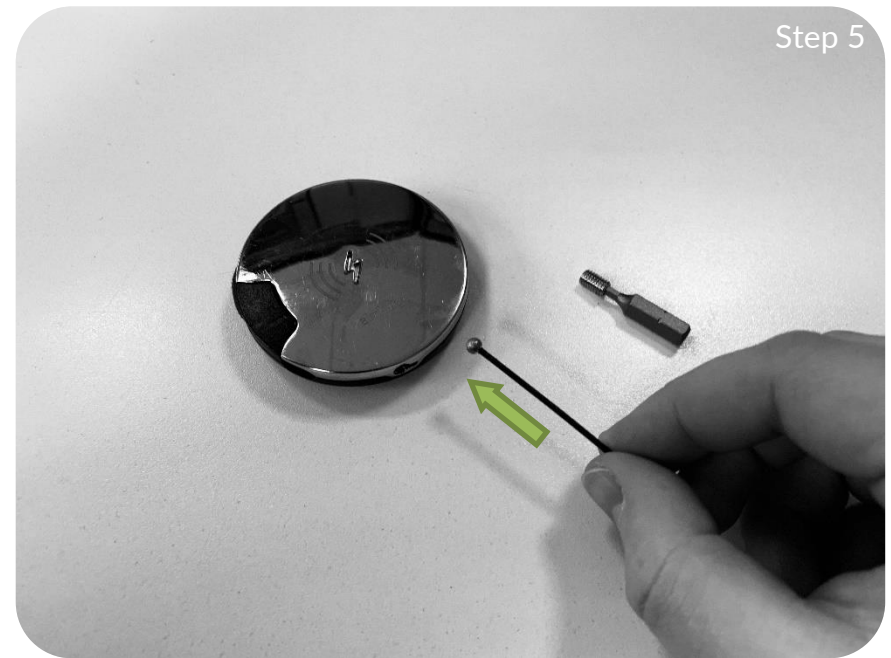


Tighten the Grub Screw to secure the Fixed Tether's ball joint inside the Orb.

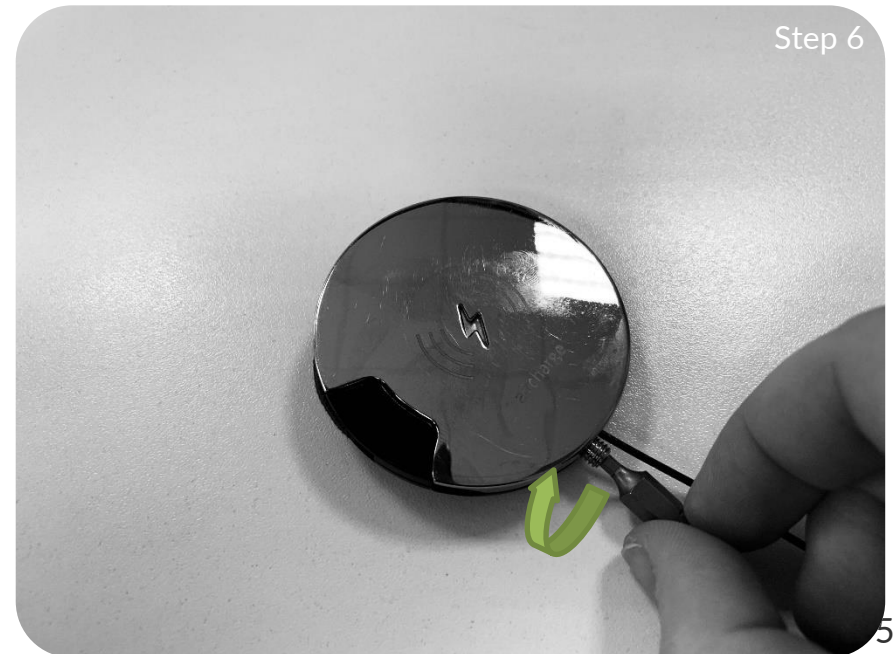

Attaching a New Tether

Insert the new Fixed Tether into the PoD's grub screw slot.

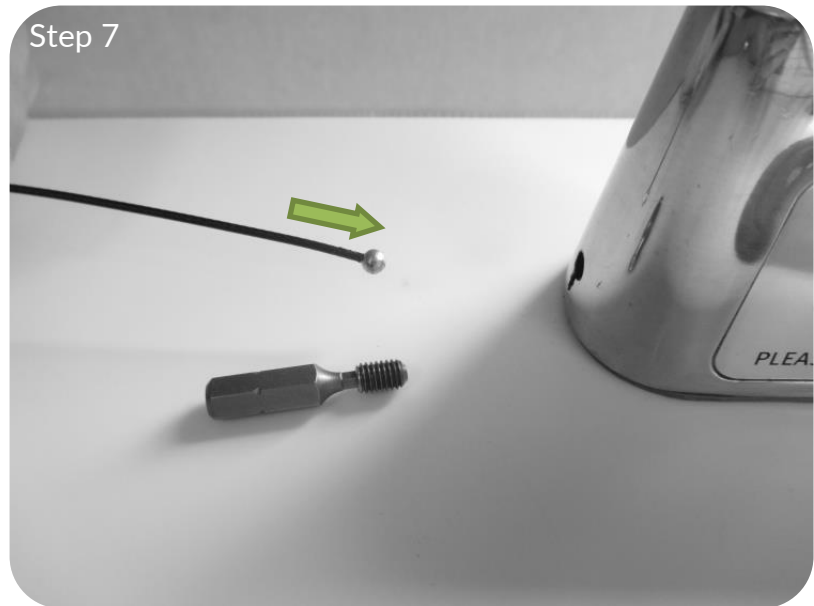

Using the 'Security Bit', tighten the Grub Screw into the PoD, securing the Fixed Tether's ball joint inside.







Thomas Ketterer

Aircharge Partner

Deutschland – Österreich – Schweiz

M DE: 0171 81 68 114

T DE: 09154 911 80 25

T AT: 0720 512 638

T CH: 0325 113 864

W: www.air-charge.de

E: thomas@air-charge.de

Skype: TK-Work